POW100取扱説明書
(POW100 User's Manual)

CONTEC

このたびはPOW100をご購入頂きましてありがとうございます。
POW100はFA-UNIT-**RFVシリーズ交換用電源です。以下の事項を参考にご使用ください。

Thank you for purchasing the POW100.　POW100 is a power supply for FA-UNIT-**RFV series exchange.　Please use it referring to the following matter.

(1)商品構成 (This Product Includes)

- 電源 (Power Supply)… 1
- 取扱説明書 (User's Manual)… 1

(2)交換手順 (Exchange Process)

1) **まず、電源コードをシャーシから外します。そして上面カバーを留めているネジを外し、カバーを開けます。**

   First remove the power cord from the chassis. And remove the screws that hold in place the cover. Then open the cover.

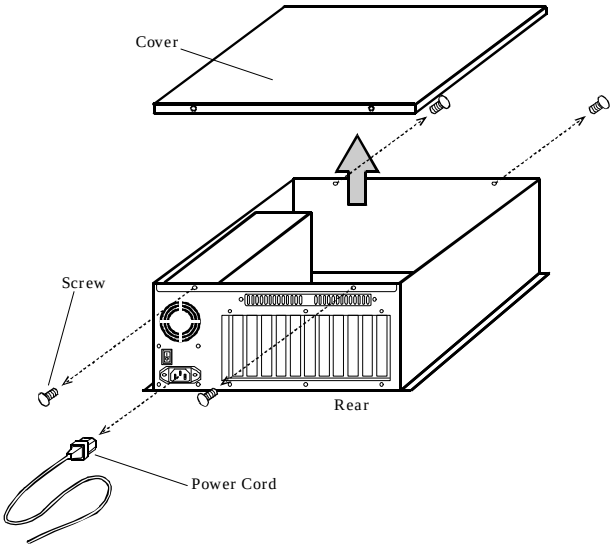

2) **バックプレーン、ファンの電源供給ケーブルをそれぞれ取り外します。**

   Remove the power connectors from the fan and backplane respectively.

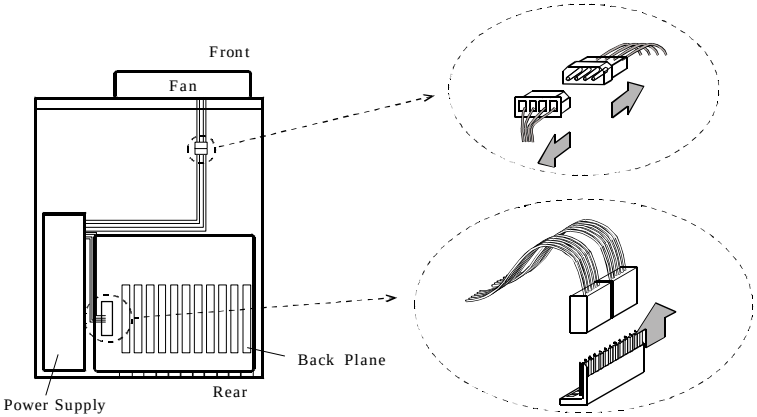

3) **電源ユニットを留めている、背面4箇所と側面2箇所のネジとケーブルと留めているネジ3個を外し、電源ユニットを取り外します。**

Remove the screws the power unit is fastened with, four on the back and two side the unit, and the three screws the cable is fastened with before removing the power supply unit.

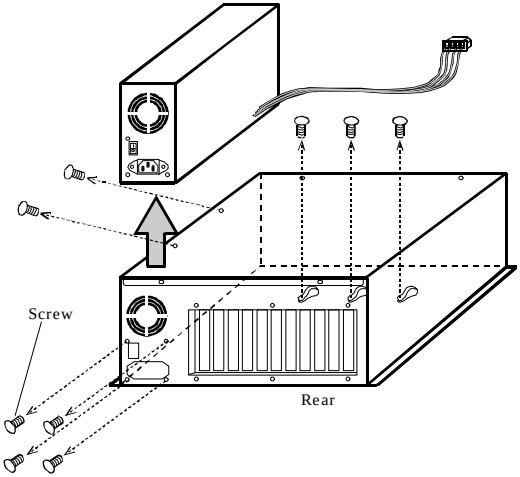

4) **新しい電源ユニットを背面4箇所、側面2箇所でネジ留めして実装してください。外したケーブルは元どおりネジ留めしてください。**

Mount the new power supply unit by fastening it with four screws on the back and two screws side the unit. Also replace the removed cable by fastening it with screws.

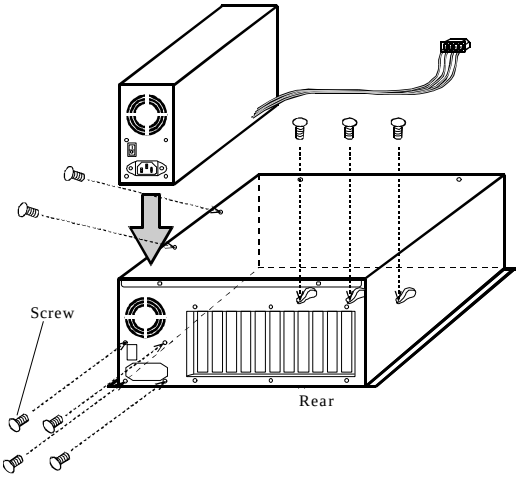

5) **取り外すときと逆の手順でバックプレーン、ファンの電源供給ケーブルをそれぞれ接続します。**

Connect between the fan and the backplane, and the power supply based on the following diagram, respectively.

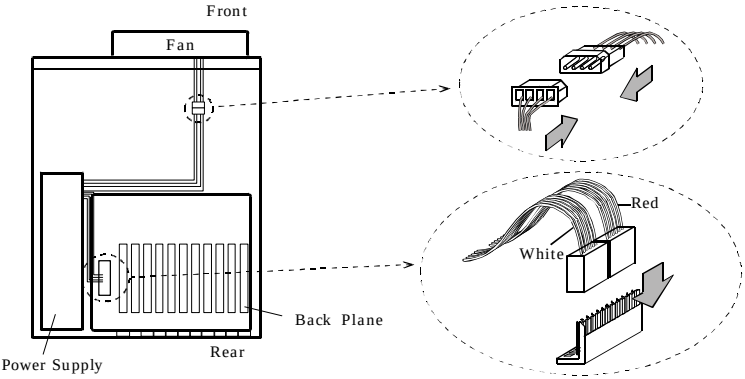

6) **取り外すときと逆の手順で、カバーを元どおりネジ留めします。そして電源コードを接続します。**

Fix the chassis cover with screws. Tighten the screws so that the cover is held in place. Connect the power cord.

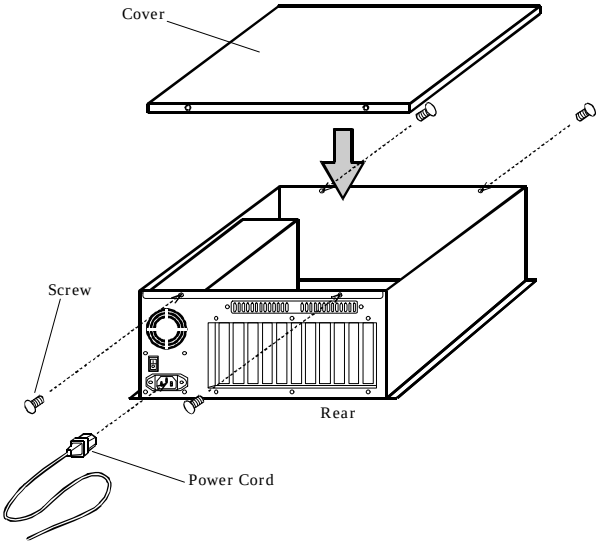

A-46-426
LZS0181
[000829]